



Electromotive 2-way proportional valve

- Actuator is not wetted
- Excellent setting range and fast reaction time
- Connection orifice DN 15
- Medium temperature up to + 130 °C
- Variants: positioner, process controller



Product variants described in the data sheet may differ from the product presentation and description.

Can be combined with

	Type ME61 EDIP process display	►
	Type ME43 Fieldbus gateway	►
	Type 8098 FLOWave SAW flowmeter	►
	Type 8008 Flowmeter for gases	►
	Type 8325 Pressure transmitter for general applications, 0...25 bar	►

Type description

The direct-acting motor valve Type 3281 is particularly suitable for dosing liquids and gases in closed or open control loops. The valve is driven by a linear stepper motor. The integrated electronics assembly simplifies the process integration; additional actuation modules are not necessary. The engine does not need any energy to maintain a certain valve opening. This feature can reduce the energy consumption of a plant dramatically and therefore make it more efficient. Type 3281 is available as a variant with integrated positioner, as well as a variant with integrated process controller.

Table of contents

1. General technical data	3
1.1. General	3
1.2. Electrical control and interfaces.....	4
2. Approvals and conformities	4
2.1. General notes	4
2.2. Conformity	4
2.3. Standards.....	4
2.4. Foods and beverages/Hygiene	5
3. Materials	5
3.1. Bürkert resistApp	5
3.2. Material specifications	6
4. Dimensions	7
4.1. Actuator	7
Globe variant	7
Angle seat variant	8
4.2. Threaded variant.....	9
4.3. Threaded variant angle seat.....	10
4.4. 2/2-way module body	11
4.5. Welded variant	12
4.6. Capacitive buffer module	13
5. Product connections	14
5.1. Electrical connection	14
Pin assignment analogue	14
Pin assignment digital (fieldbus)	14
6. Performance specifications	15
6.1. Duty cycle derating diagram.....	15
6.2. Pressure range	15
Standard variant.....	15
6.3. Flow characteristic	16
Determination of the K_v value.....	16
Exemplary characteristic curve of the motor valve.....	16
7. Product operation	17
8. Product accessories	18
8.1. Accessories capacitive buffer module.....	18
8.2. Bürkert Communicator Software.....	18
8.3. Connection Type 3282 with Bürkert Communicator software	19
9. Ordering information	19
9.1. Bürkert eShop	19
9.2. Recommendation regarding product selection.....	19
9.3. Bürkert product filter.....	19
9.4. Bürkert Product Enquiry Form	20
9.5. Ordering chart accessories.....	20
Standard accessories	20
Accessories cable.....	20
Bürkert accessories.....	20

1. General technical data

1.1. General

Product properties	
Dimensions	Further information can be found in chapter “4. Dimensions” on page 7.
Material	
Further information can be found in chapter “3.2. Material specifications” on page 6.	
Seal	PTFE
Valve body	Stainless steel
Flow direction	Against closing direction (below seat)
Design	- Globe: on/off valve or control valve - Angle seat: on/off valve or control valve
Weight	~1.1 kg
Orifice	DN 15, NPS ½
Controller variant	On/off valve or position controller or process controller
Safety setting in case of power failure	With capacitive buffer module as accessory, see chapter “4.6. Capacitive buffer module” on page 13.
Status indicator	LED (Refer to the operating instructions Type 3281 ► for more information.)
Performance data	
Typical values of positioning behaviour^{1.)}	
Dead band of the position control	± 0.5 % (corresponds to setting range 1:100)
Closing time	2.5 s
Operating pressure	0...16 bar(g) (depending on seat size, see chapter “6.2. Pressure range” on page 15) Vacuum variant up to -0.9 bar(g) (optional)
Duty cycle	Up to 100 % (depending on medium and ambient temperature)
K _{vs} value	0.57...4.55 m³/h (see chapter “6.2. Pressure range” on page 15)
Nominal pressure	PN 25 (DIN EN 1333)
Seat leakage (DIN EN 60534 - 4)	Class VI
Electrical data	
Operating voltage	24 V DC ± 10 % (max. residual ripple 10 %)
Power consumption	< 1 W holding power Max. 12 W (short term 20 W)
Medium data	
Operating medium	Neutral gases and liquids
Medium temperature	- 20 °C...+ 130 °C
Viscosity	Max. 600 mm²/s (cSt)
Product connections	
Port connection ^{2.)}	- Threaded connection - G (EN ISO 228 - 1) - RC (EN ISO 228 - 1, ISO 7 - 1/DIN EN 10226 - 2) - NPT (ASME B 1.20.1) - Welded connection - DIN EN ISO 1127/ISO 4200/DIN 11866 B - DIN 11850 2/DIN 11866 A/DIN EN 10357 A
Communication and control	
Standard signal (analogue)	Set-point value: 0/4...20 mA, 0...5/10 V and digital input, see chapter “1.2. Electrical control and interfaces” on page 4.
Fieldbus (digital)	- Bürkert system bus (bÜS) - CANopen (optional)
EDIP	Field device for integration into the EDIP platform via Bürkert system bus (bÜS) Further information can be found in chapter “8.2. Bürkert Communicator Software” on page 18.
Approvals and conformities	
Degree of protection	IP54
Foods and beverages/Hygiene	Further information can be found in chapter “2.4. Foods and beverages/Hygiene” on page 5.

Environment and installation

Installation position	As required, preferably with actuator upright
Ambient temperature	- 10 °C...+ 60 °C (Derating see chapter "6.1. Duty cycle derating diagram" on page 15)

- 1.) The characteristic values of the control behaviour depend on the operating conditions.
 2.) Others on request

1.2. Electrical control and interfaces

Technical data	Device variants			
	Positioner (C)		Process controller (D)	
	Analogue	Digital (fieldbus)	Analogue	Digital (fieldbus)
Electrical connection	M12 plug, A-coded, 8-pin	M12 plug, A-coded, 5-pin	M12 plug, A-coded, 8-pin and M12 socket, A-coded, 5-pin	M12 plug, A-coded, 5-pin and M12 socket, A-coded, 5-pin
Input signal (set-point value)	4...20 mA, 0...20 mA, 0...10 V ¹⁾ or 0...5 V PWM (800 Hz, 24 V, min: 10 V, max: 30 V)	–	4...20 mA, 0...20 mA, 0...10 V or 0...5 V PWM (800 Hz, 24 V, min: 10 V, max: 30 V)	–
Input signal (actual value of ext. sensor)	–	–	4...20 mA, 0...20 mA, 0...10 V or 0...5 V	4...20 mA, 0...20 mA, 0...10 V, 0...5 V or frequency (5...2.000 Hz)
Input impedance for analogue input	60 Ω (Current), 22 kΩ (Voltage)	–	60 Ω (current), 22 kΩ (voltage)	60 Ω (current), 22 kΩ (voltage)
Output signal (actual value)	0/4...20 mA (max. Load: 560 Ω), 0...5/10 V (max. Current: 10 mA)	–	0/4...20 mA (max. load: 560 Ω), 0...5/10 V (max. current: 10 mA)	–
Fieldbus interface	–	büS/CANopen	–	büS/CANopen
Parameterisation tool	Bürkert Communicator (connection via büS stick)	Bürkert Communicator (connection via büS stick)	Bürkert Communicator (connection via büS stick)	Bürkert Communicator (connection via büS stick)

1) For an on/off function, the input signal is: 0 V (log. 0, valve closed) or 10...30 V (log. 1, valve open)

2. Approvals and conformities

2.1. General notes

- The approvals and conformities listed below must be stated when making enquiries. This is the only way to ensure that the product complies with all required specifications.
- Not all available variants can be supplied with the below mentioned approvals or conformities.

2.2. Conformity

In accordance with the Declaration of conformity, the product is compliant with the EU Directives.

2.3. Standards


The applied standards which are used to demonstrate compliance with the EU Directives are listed in the EU-Type Examination Certificate and/or the EU Declaration of Conformity.

2.4. Foods and beverages/Hygiene

Conformity	Description
	EC Regulation 1935/2004 of the European Parliament and of the Council All wetted materials are compliant with EC Regulation 1935/2004/EC according to the manufacturer's declaration.
	China food GB Standards of the People's Republic of China (valid for the variable code PL10) All wetted materials are compliant with the requirement of China food GB Standards according to the manufacturer's declaration.

3. Materials

3.1. Bürkert resistApp

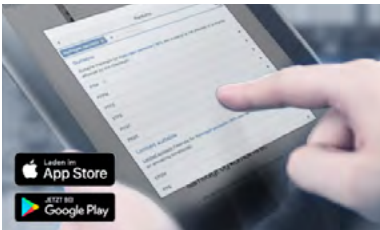


Bürkert resistApp – Chemical resistance chart

You want to ensure the reliability and durability of the materials in your individual application case? Verify your combination of media and materials on our website or in our resistApp.

[Start chemical resistance check](#)

3.2. Material specifications

Note:
The proportional valve Type 3281 is supplied with various port connections. These connections are not shown completely. However, they correspond to the material of the valve housing.

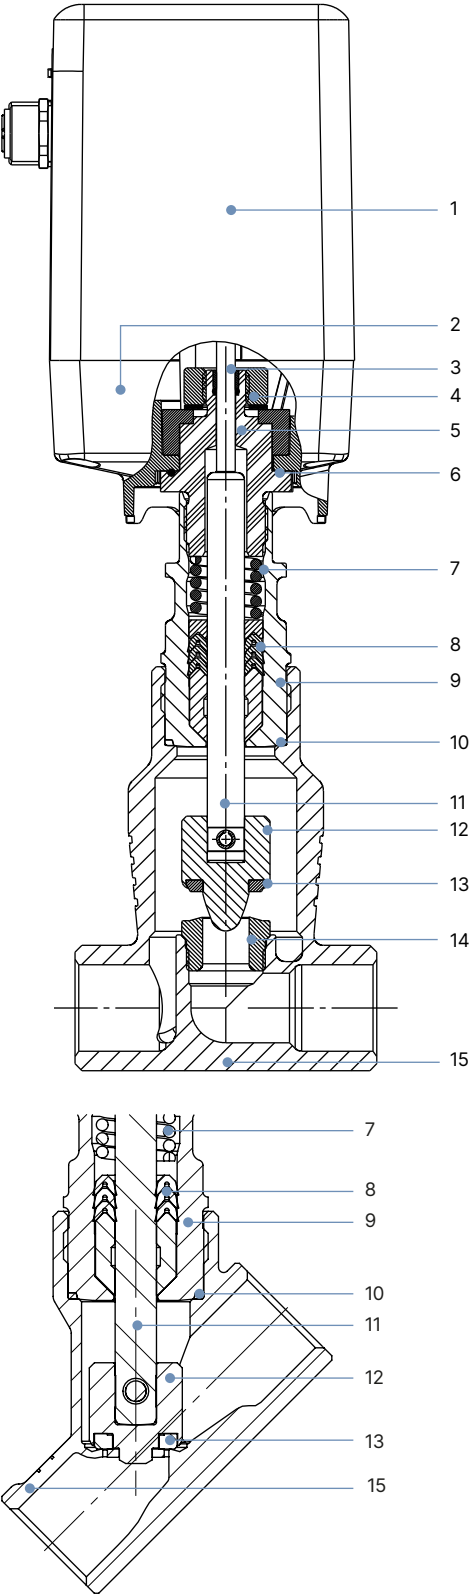

Actuator

No.	Element	Material
1	Housing cover	PC (Polycarbonate)
2	Housing base	PPS (Polyphenylenesulfide)

Valve body

Nr.	Element	Material
3	Spindle guide	High-performance polymer
4	Sliding washers	High-performance polymer
5	Guide piece	Stainless steel 1.4305
6	O-ring	NBR
7	Compression spring	Stainless steel
8	Spindle seal	PTFE (filled)/FKM, with spring compensation
9	Pipe	Stainless steel 1.4404
10	Body seal	Graphite
11	Spindle	Stainless steel 1.4401
12	Control cone/swivel plate	Stainless steel 1.4571
13	Seat seal	PTFE sealing washer
14	Valve seat	Stainless steel 1.4571
15	Valve body	Stainless steel CF3M/316L

Nr.	Element	Werkstoff
7	Compression spring	Stainless steel
8	Spindle seal	PTFE (filled)/FKM, with spring compensation
9	Pipe	Stainless steel 1.4404
10	Body seal	Graphite
11	Spindle	Stainless steel 1.4401
12	Control cone/swivel plate	Stainless steel 1.4571
13	Seat seal	PTFE sealing washer
15	Valve body	Stainless steel CF3M/316L


4. Dimensions

4.1. Actuator

Globe variant

Note:

- Dimensions in mm
- Twisting of the actuator housing is possible, see **operating Instructions Type 3281** ▶.

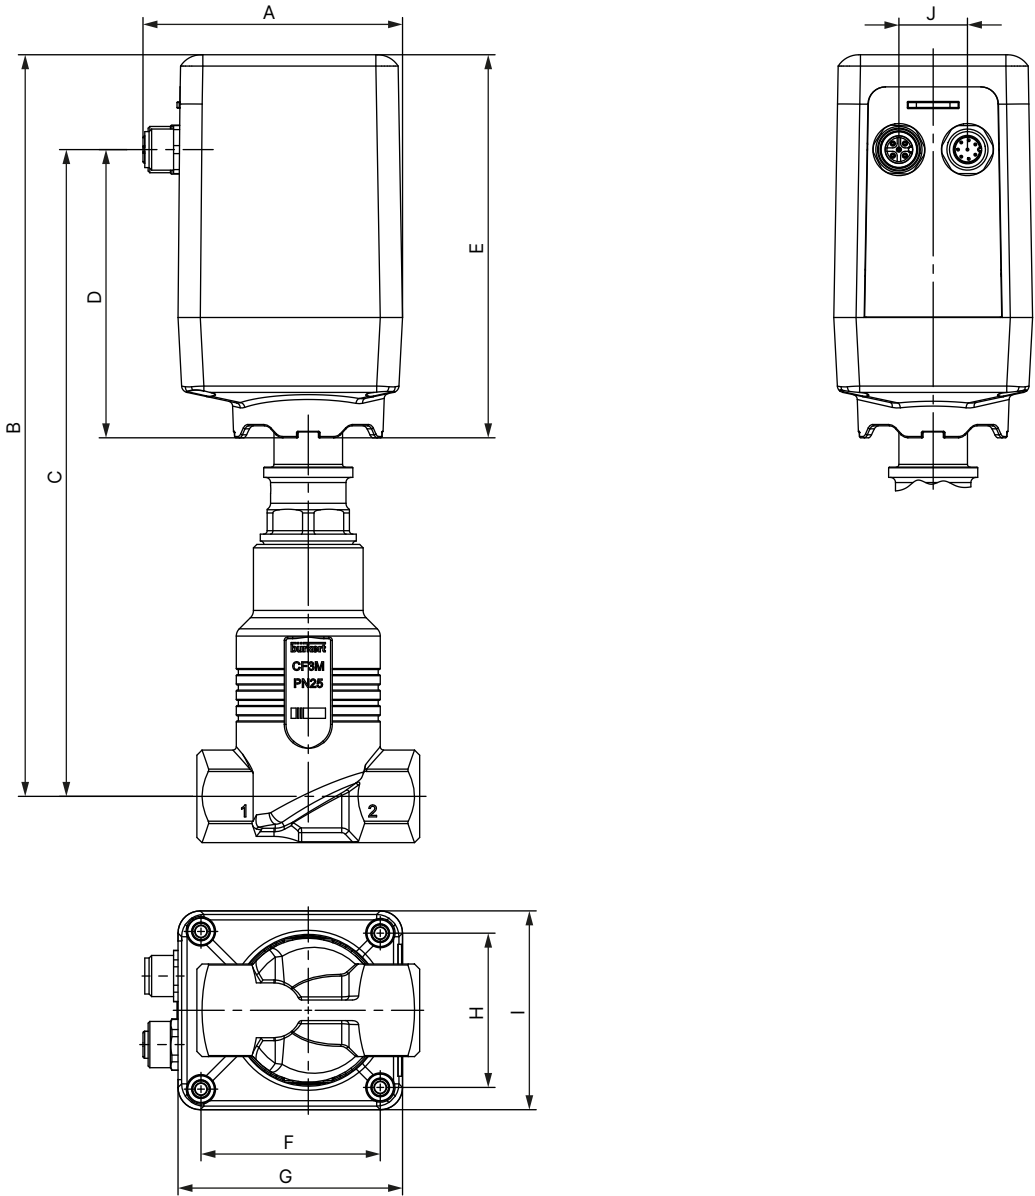


A	B	C	D	E	F	G	H	I	J
76	216	188	84	112	52	66	45	58	20

Angle seat variant


Note:

Dimensions in mm

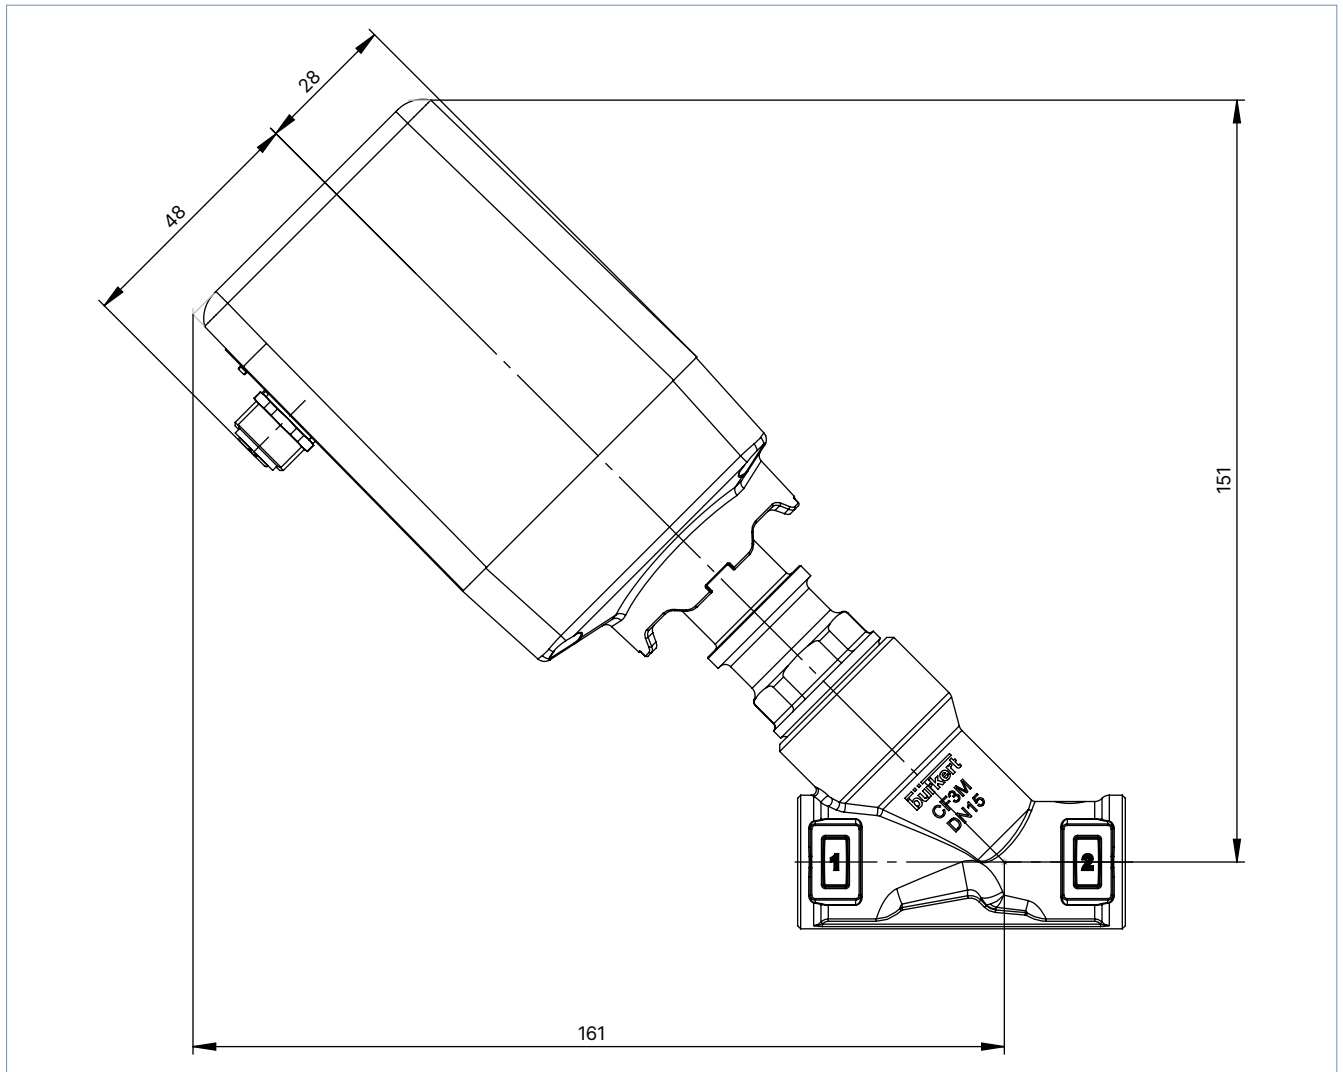

4.2. Threaded variant


Note:
Dimensions in mm

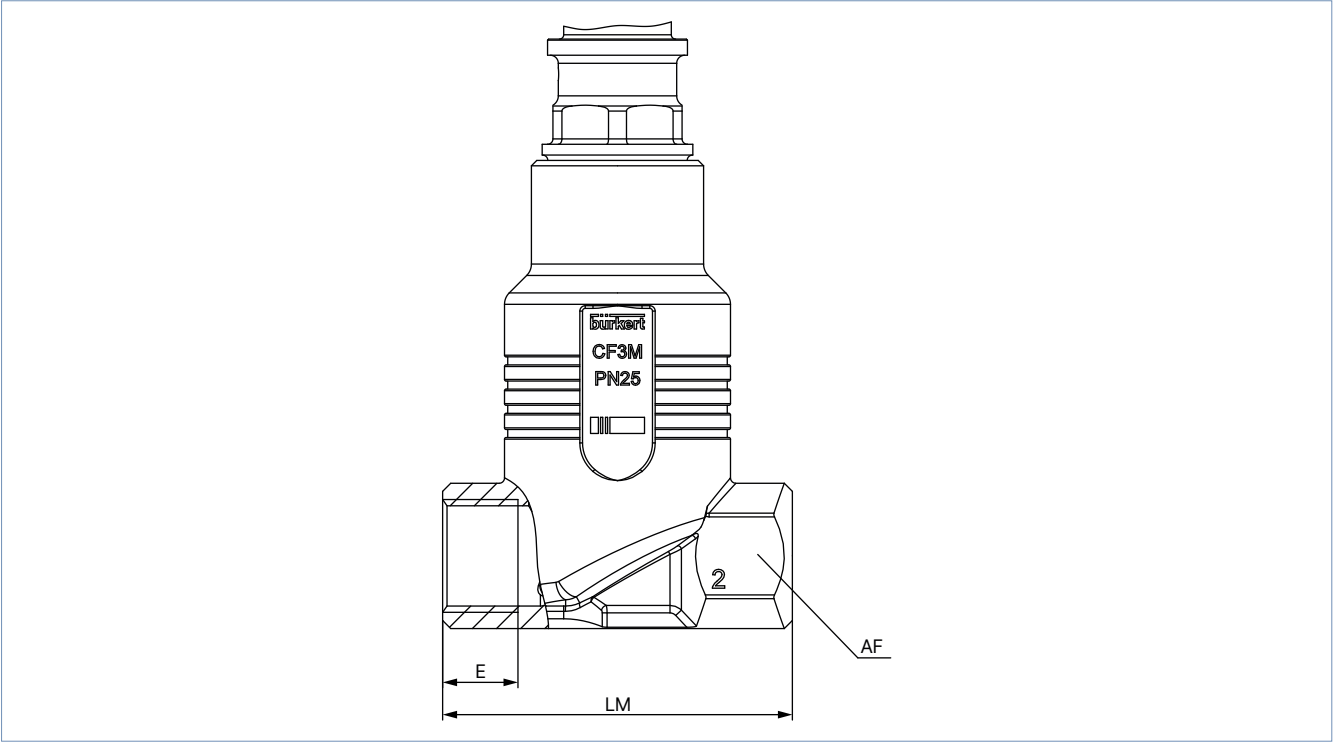

Orifice (port connection)		G (DIN ISO 228 - 1) NPT (ASME B1.20.1) RC (ISO 7 - 1)				
		E			LM	AF
DN	NPS	G	NPT	RC		
15	½	14	13.7	13.2	65	27

4.3. Threaded variant angle seat

Note:
Dimensions in mm

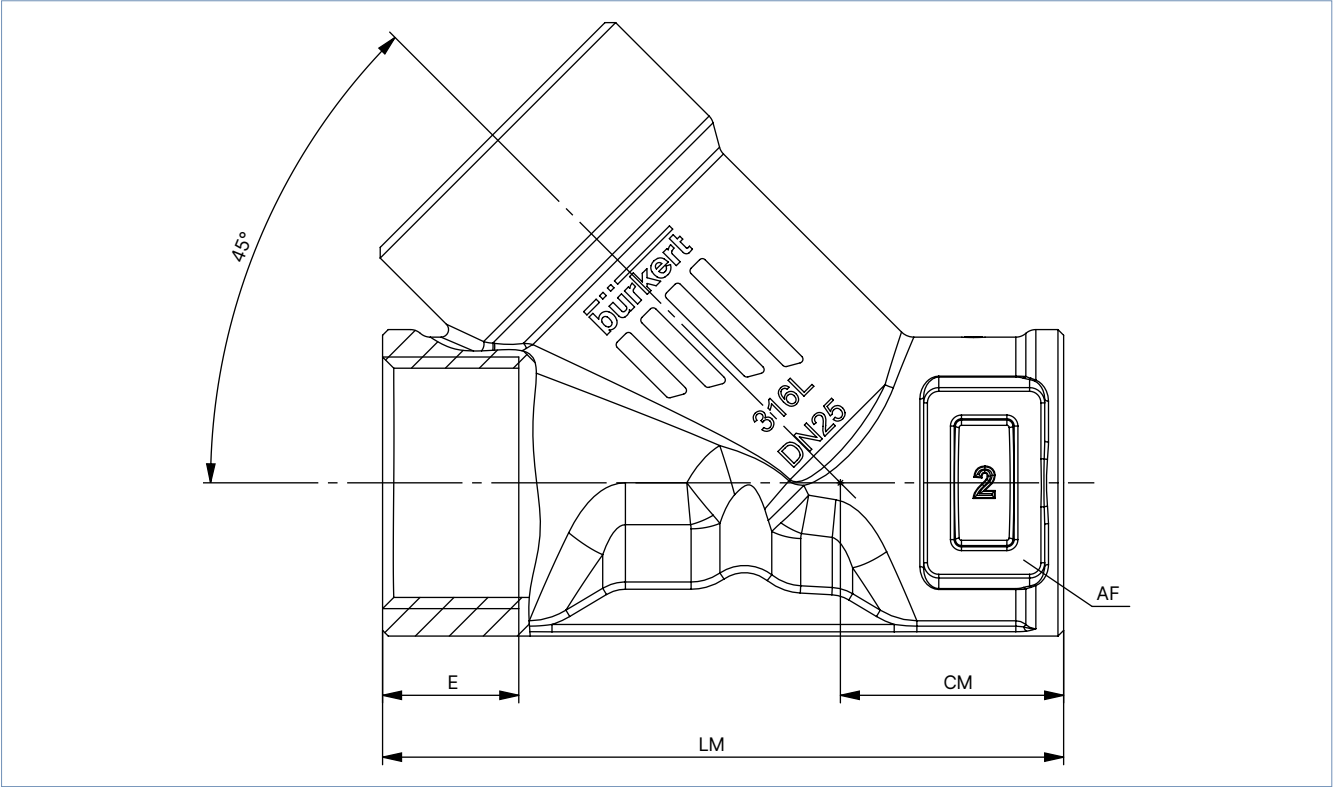


Orifice (port connection)		G (DIN ISO 228-1) NPT (ASME B1.20.1) RC (ISO 7-1)					
		E			CM	LM	AF
DN	NPS	G	NPT	RC			
15	1/2	14	13.7	13.2	24	65	27

4.4. 2/2-way module body

Note:


- Dimensions in mm
- Connection 3 or 4 can be blanked

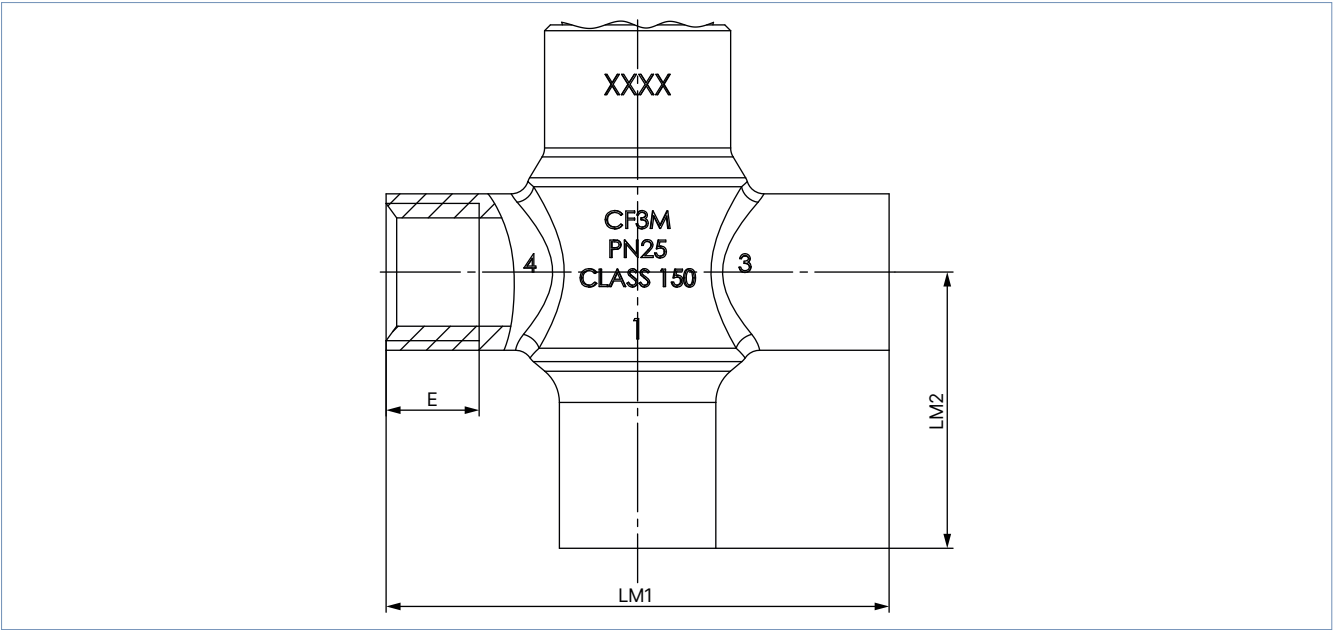

Orifice (port connection)		G (DIN ISO 228 -1)		
		E	LM1	LM2
DN	NPS	G		
15	1/2	16	86.5	47.5

4.5. Welded variant

Note:
Dimensions in mm

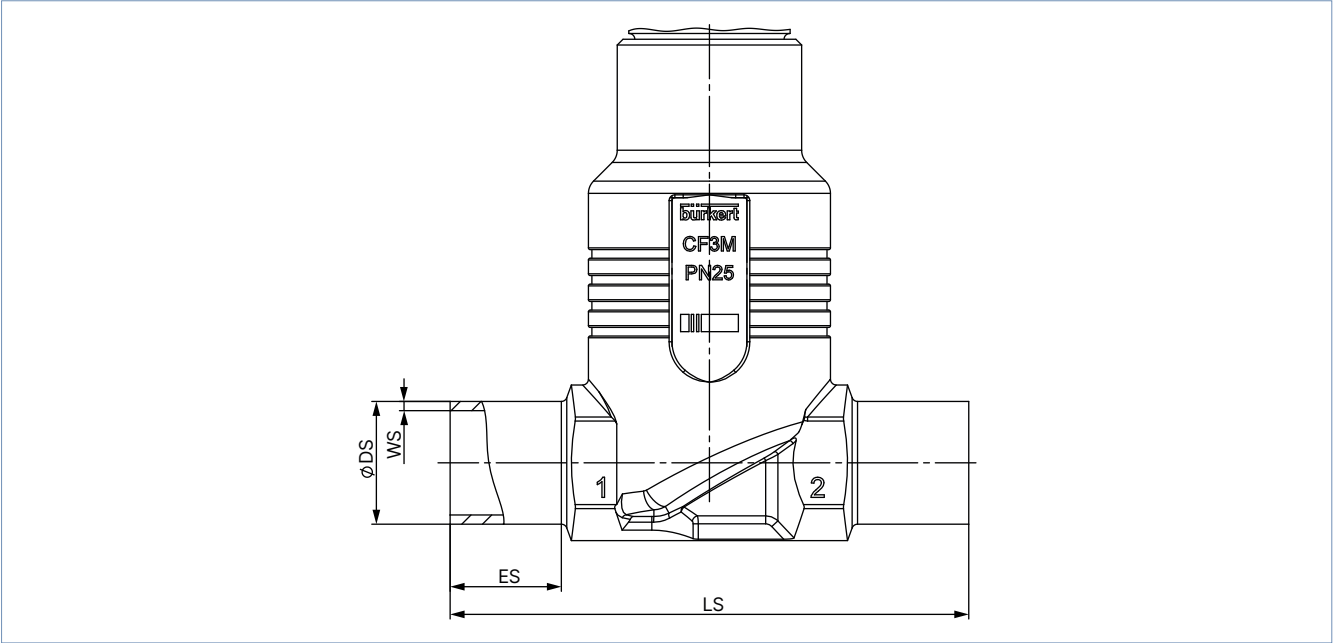


Orifice (port connection) DN	ES	LS	EN ISO 1127 1/ISO 4200/ DIN 11866 B		DIN 11850 2/DIN 11866 A/ DIN EN 10357 A	
			ØDS	WS	ØDS	WS
15	20	90	21.3	1.6	19	1.5

4.6. Capacitive buffer module

Note:

- Dimensions in mm
- Further information can be found in chapter “8.1. Accessories capacitive buffer module” on page 18.

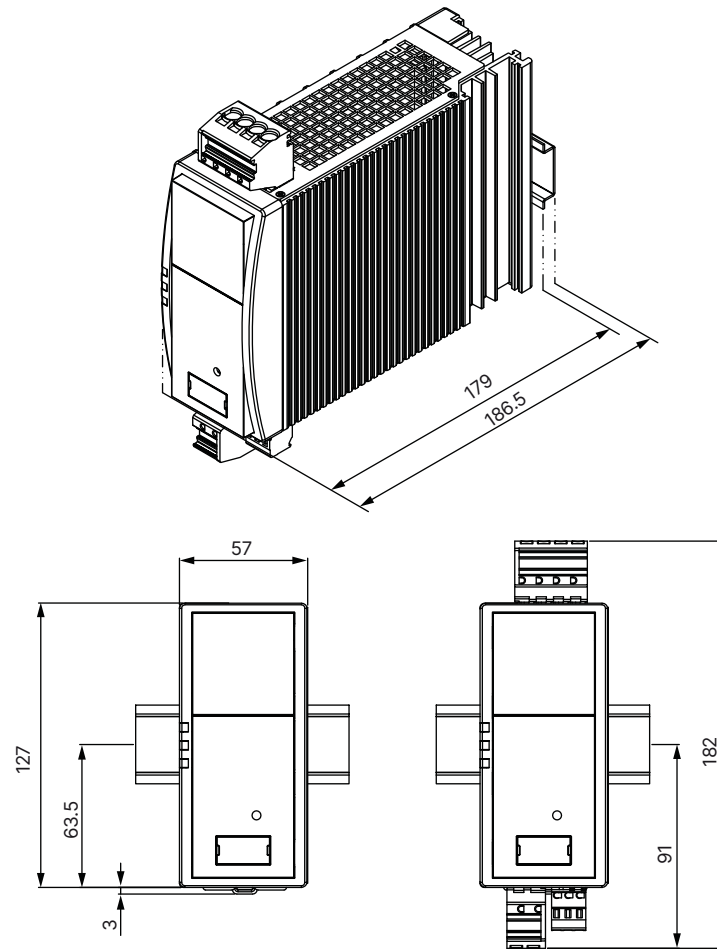


5. Product connections

5.1. Electrical connection

Pin assignment analogue

Note:

For parameterisation and configuration of the positioner and the process controller variants, please use the Bürkert Communicator software tool, see ["8.2. Bürkert Communicator Software" on page 18](#).

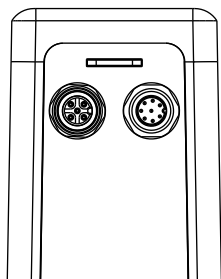

Circular plug M12, 8-pin	Pin	Configuration
	1	24 V DC
	2	Power supply GND
	3	Internal use ¹⁾
	4	Internal use ¹⁾
	5	Internal use ¹⁾
	6	Signal input +
	7	Signal output
	8	Signal GND

Only for positioners and process controllers variant, for connection of the parameterisation tools: Bürkert Communicator. The connection is via the bÜS-Stick. Using an adapter cable (M12 8-pin to M12 5-pin) the bÜS-Stick can be connected (see ["9.5. Ordering chart accessories" on page 20](#)).


Additional for process controller variant:

Socket M12, 5-pin	Pin	Configuration
	1	24 V DC sensor power supply
	2	Analogue I_N (0...20 mA, 4...20 mA, 0...5 V or 0...10 V)
	3	GND
	4	GND (bridge to GND pin 3)
	5	Not connected

Pin assignment digital (fieldbus)

Note:

For parameterisation and configuration of the positioner and the process controller variants, please use the Bürkert Communicator software tool, see ["8.2. Bürkert Communicator Software" on page 18](#).

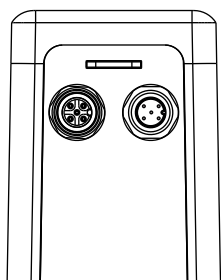

Circular plug M12, 5-pin	Pin	Configuration
	1	Shielding
	2	24 V DC
	3	GND
	4	CAN_H
	5	CAN_L

Additional for process controller variant:


Socket M12, 5-pin	Pin	Configuration
	1	24 V DC sensor power supply
	2	Analogue I_N (0...20 mA, 4...20 mA, 0...5 V, 0...10 V or frequency)
	3	GND
	4	GND (bridge to GND pin 3)
	5	Not connected

6. Performance specifications

6.1. Duty cycle derating diagram

Note:

- The duty cycle is an important factor for motor valves. The self-heating of the engine limits the maximum duty cycle. High ambient temperatures additionally increase the risk of damage due to overheating. The following diagram shows the recommended maximum duty cycle as a function of the ambient temperature. In energy-saving mode (lower driving force), higher duty cycles are possible. The motor is optimised for the valve function in terms of size, power consumption and costs.
- The duty cycle does not mean the duty cycle of the device but the duty cycle of the motor. This is only switched on when the valve is to move. Frequent set-point value changes drastically increase the duty cycle of the motor.
- Operating the valve outside the recommended duty cycle limits will result in a significantly reduced service life of the valve.

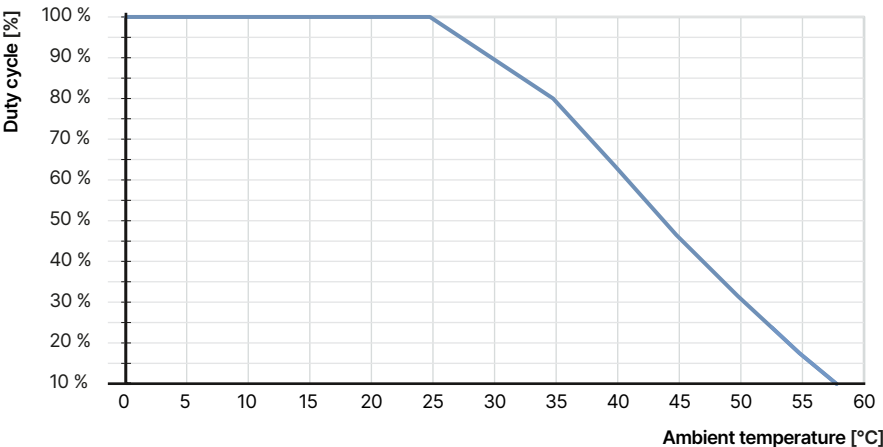

Derating curve for max. medium temperature (+ 130 °C)

6.2. Pressure range

Standard variant

Note:

For orders from our standard product range, use the product filter in our eShop (see [“9.1. Bürkert eShop” on page 19](#)).

Alternatively, you can use the Product Enquiry Form (see [“9.4. Bürkert Product Enquiry Form” on page 20](#)) for information about the device layout and send it to us after completion.

Valve function	Seat size		Controller variant	Port connection	K _{vs} value	Pressure range
					[m³/h] ^{1.)}	[bar(g)]
Control valve, without safety position in case of power failure	Globe	4	Control	G ½	0.57	0...16
		6	Control	G ½	1.25	0...16
		8	Control	G ½	1.8	0...12
		10	Control	G ½	2.25	0...7
		15	On/off	G ½	4.45	0...3.5
	Angle-seat	15	Control	G ½	3.6	0...3
		15	On/off	G ½	4.55	0...3.5

1.) Flow value for water, measurement at + 20 °C, 1 bar pressure difference above the fully open valve

Further variants on request



Pressure
Vacuum variant:
This variant is suitable up to - 0.9 bar(g) (optional)

6.3. Flow characteristic

Determination of the K_v value

Note:

Once the K_v -value required for the application has been calculated, it can be compared with the K_{vs} -values from the ordering chart. The K_{vs} -value must be higher than the K_v -value of the application, but should be neither too high nor too close to it - as a recommendation: 10 % higher.

Pressure drop	K_v value for liquids [m ³ /h]	K_v value for gases [m ³ /h]	Value	Description	Unit
Sub-critical $p_2 > \frac{p_1}{2}$	$= Q \sqrt{\frac{\rho}{1000 \Delta p}}$	$= \frac{Q_N}{514} \sqrt{\frac{T_1 \rho_N}{p_2 \Delta p}}$	K_v	Flow coefficient	[m ³ /h] ^{1.)}
Supercritical $p_2 < \frac{p_1}{2}$	$= Q \sqrt{\frac{\rho}{1000 \Delta p}}$	$= \frac{Q_N}{257 p_1} \sqrt{T_1 \rho_N}$	Q_N	Standard flow rate	[m ³ /h] ^{2.)}
			p_1	Inlet pressure	[bar] ^{3.)}
			p_2	Outlet pressure	[bar] ^{3.)}
			Δp	Differential pressure $p_1 \dots p_2$	[bar]
			ρ	Density	[kg/m ³]
			ρ_N	Standard density	[kg/m ³]
			T_1	Medium temperature	[(273+t)K]

1.) Measured for water, $\Delta p = 1$ bar, over the value

2.) At reference conditions 1.013 bar and 0 °C (273 K)

3.) Absolute pressure


Exemplary characteristic curve of the motor valve

Note:

The dimensioning of the seat size is very important for electromotive proportional valves to function properly within the application. The seat size must be selected so that, on the one hand, the desired flow range is achieved and, on the other hand, when the valve is fully open, a sufficient portion of the total pressure drop occurs across the valve.

Reference value: $\Delta p_{\text{valve}} > 25$ % of the total pressure drop

Otherwise, an ideal, linear valve characteristic is deformed into a curved system characteristic.

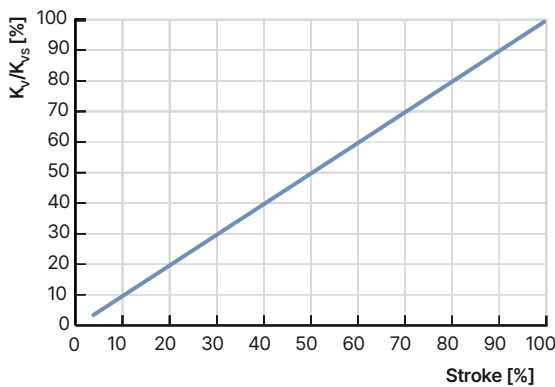

Linear flow characteristic - the K_{vs} values of the respective seat sizes can be found in chapter "6.2. Pressure range" on page 15.

7. Product operation

Process diagram	Description
The diagram shows a 'Position control loop' enclosed in a dashed box. It starts with a 'Set-point position' block outputting 'CMD'. This signal enters a summing junction with a disturbance 'Z1'. The resulting signal 'Xd1' goes to a 'Positioner' block, which outputs 'CTRL' to an 'Electromotive actuator'. The actuator's output is 'POS', which goes to a 'Valve body' and also to a 'Position sensor'. The sensor's output is fed back to the summing junction. The 'Valve body' outputs 'Valve opening'.	Positioner variant The proportional valve in the position control variant converts an external standard signal, the position set-point value, into a valve position. The position of the actuator is controlled according to the set-point position. The position sensor records the current position (POS) of the electromotive valve. This actual position is compared by the positioner with the set-point value (CMD) specified as the standard signal. If there is a control difference (Xd1), a motor control signal is given to the actuator as the actuating variable. Z1 is a disturbance value. The two end positions of the valve are indicated by the LED status. In addition, the actual position recorded by the position sensor is output via the M12 circular plug-in connector.
The diagram shows a 'Process control loop' enclosed in a dashed box. It starts with a 'Process set point value' block outputting 'SP'. This signal enters a summing junction with a disturbance 'Z2'. The resulting signal 'Xd2' goes to a 'Process controller' block, which outputs 'CMD' to the 'Position control loop' (the same loop as in the positioner variant). The 'Process controller' also receives 'PV' from a 'Transmitter' block. The 'Transmitter' receives 'Measured quantity' from the 'Process' block. The 'Process' block also receives 'Valve opening' from the 'Position control loop'.	Process controller variant The additionally implemented PID controller can perform not only the actual position control but also a process control in the sense of a cascade control. The process controller is integrated into a control loop. The position setpoint of the valve is calculated from the process setpoint and the actual process value via the control parameters (PID controller). The process setpoint can be specified by an external signal. During the process control the position control mentioned above becomes the subordinate auxiliary control circuit; this results in a cascade control. The process controller in the main control circuit has a PID function. The process set-point value (SP) is specified as a set-point value and is compared with the actual value (PV) of the process variable to be controlled. The position measuring system records the current position (POS) of the electromotive linear actuator. This position actual value is compared by the position controller with the set-point value (CMD) specified by the process controller. If there is a control difference (Xd2), the actual position (POS) and therefore the valve opening are changed by the control variable (CTRL). Z2 represents a disturbance variable.

DTS 1000551384 EN Version: Q Status: RL (released | freigegeben | valide) printed: 21.05.2026

8. Product accessories

8.1. Accessories capacitive buffer module

Note:

- See [“4.6. Capacitive buffer module” on page 13](#) for information about dimensions.
- See [“Standard accessories” on page 20](#) for ordering information.

Accessories	Description
Motor valve(s) connection  24 V DC power supply For example: Single phase, primary switched mode power supply Type 1573	• Capacitive buffer module for moving to a safety position in case of power failure • In order to be able to move to a safety position of the valve in the event of a power failure, the valve must be supplied with voltage via the capacitive buffer module. In the event of a power failure, the buffer module provides an output voltage of 18 V DC for a few seconds. The reduced input voltage is detected by the valve and the safety position is approached accordingly. Up to 3 valves of Type 3280 or 2 valves of Type 3281 and Type 3285 can be connected to a buffer module. Factory setting of the safety position: “valve closed” • For standard variant (functionality available from software version A.08): Adjustable via DIP switch (when the effective direction is reversed, the safety position changes to “valve open”) • For positioner and process controller variant (functionality available from software version A.06): Adjustable via Bürkert Communicator (user-defined safety position)

8.2. Bürkert Communicator Software

Note:


- An adjustment of the valve by the Bürkert Communicator is only possible with the positioner or process controller variants.
- The associated communication software can be downloaded under **Type 8920** ▶.

The Bürkert Communicator is the most important software tool of the device platform EDIP (Efficient Device Integration Platform). The extensive features of this universal tool facilitate the configuration and parameterisation of all devices equipped with the digital CANopen-based interface.

The Bürkert Communicator provides the user with a complete overview of all cyclic process values and acyclic diagnostic data. The integrated graphical programming environment enables the creation of control functions for decentralised sub-systems. The connection to the PC can be established via a USB-büS interface set. This is available as an accessory (see [“9.5. Ordering chart accessories” on page 20](#)).

The Bürkert Communicator enables:

- Configuration, parameterisation and diagnosis of EDIP devices / networks
- Easy and convenient assignment (mapping) of cyclical values
- Graphical display of process values
- Firmware update of the connected EDIP devices
- Saving and restoring device configurations

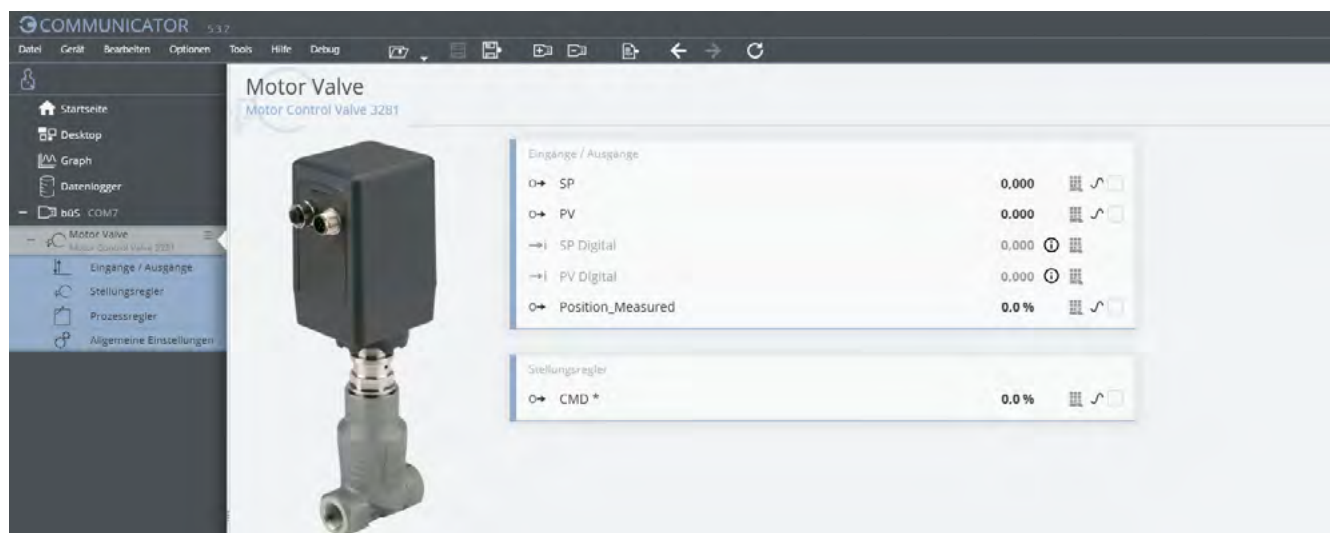

8.3. Connection Type 3282 with Bürkert Communicator software

The Bürkert Communicator interface is based on CANopen. An appropriate bus termination is mandatory.

A bus stick is required to connect the motor valve to the Bürkert Communicator software tool. The USB-bus interface sets contains the necessary accessories.

- Variants with bus/CANopen communication interface:
 - Activate the switchable terminating resistor on the bus stick. Exception: if the device is already integrated in a properly terminated bus network, the terminating resistor must not be activated.
 - The connection is made directly via the 5-pin M12 plug (USB-bus interface set 1 contains the necessary accessories).
- Variants with standard signal interfaces:
 - Activate the switchable terminating resistor on the bus stick.
 - The connection is made via the 8-pin M12 plug on the device (USB-bus interface set 1 + bus adapter; socket 8-pin M12 to plug 5-pin M12 contain the necessary accessories).

9. Ordering information

9.1. Bürkert eShop



Bürkert eShop – Easy ordering and quick delivery

You want to find your desired Bürkert product or spare part quickly and order directly? Our online shop is available for you 24/7. Sign up and enjoy all the benefits.

[Order online now](#)

9.2. Recommendation regarding product selection

Note:

- The configuration of the seat size is very important for proportional valves to ensure proper functioning within the application. The seat size must be selected in such a way that on the one hand the desired flow range is achieved and on the other hand a sufficient part of the total pressure drop across the valve takes place when the valve is fully open.
- Reference value: pressure drop of the valve > 25 % of the total pressure drop
- Let Bürkert engineers advise you already in the planning phase.

9.3. Bürkert product filter




Bürkert product filter – Get quickly to the right product

You want to select products comfortably based on your technical requirements? Use the Bürkert product filter and find suitable articles for your application quickly and easily.

[Try out our product filter](#)

9.4. Bürkert Product Enquiry Form

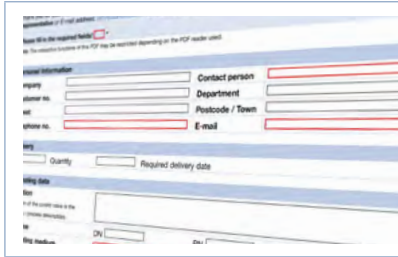
 A screenshot of the Bürkert Product Enquiry Form. It includes fields for 'Please Information' (Name, Address, City, State, Zip, Country), 'Contact person' (Name, Department, Postcode / Town, E-mail), 'Quantity', 'Required delivery date', 'Fax', and 'Phone'. There is a 'Fill out the form now' button at the bottom.

Bürkert Product Enquiry Form – Your enquiry quickly and compactly

Would you like to make a specific product enquiry based on your technical requirements? Use our Product Enquiry Form for this purpose. There you will find all the relevant information for your Bürkert contact. This will enable us to provide you with the best possible advice.

[Fill out the form now](#)

9.5. Ordering chart accessories

Standard accessories

Description	Article no.
Power supply unit Phoenix Class2 (Type 1573), 85...240 V AC/24 V DC, 1.25 A, NEC Class 2 (UL 1310)	772438 
Power supply unit for standard rail (Type 1573), 100...240 V AC/24 V DC, 1 A, NEC Class 2 (UL 1310)	772361 
Power supply unit for standard rail (Type 1573), 100...240 V AC/24 V DC, 2 A, NEC Class 2 (UL 1310)	772362 
Power supply unit for standard rail (Type 1573), 100...240 V AC/24 V DC, 3,8 A, NEC Class 2 (UL 60950 - 1)	772898 
Buffer module (Type 1573) for safety position in case of power failure	773440 

Accessories cable

Description	Article no.
M12 circular socket with cable, 8-pin, cable length: 2 m, ready-made cable for input and output signals (for analogue variant)	919061 
M12 circular socket with cable, 8-pin, cable length: 2 m, ready-made shielded cable for input and output signals (for analogue variant)	918991 
M12 cable shielded, 5-pin, cable length: 2 m, ready-made shielded cable for actual process value input signals (only for variant with analogue/digital process controller)	559177 

Bürkert accessories

Note:

- For connection to a bÜS/CANopen network, see „Supplement | Cabling guide bÜS/EDIP“ on our website under „User Manuals“, **Type 3281** ►.
- Detailed accessory tables can be found in the cabling guide „Supplement | Cabling guide bÜS/EDIP“ on our website under „User Manuals“, **Type 3281** ►.
- Can only be used with positioner and process controller variant

Description	Article no.
Software Bürkert Communicator	Type 8920 ►
bÜS adapter, M12 socket, 8-pin to M12 plug, 5-pin (for bÜS stick connection)	773286 
USB-bÜS interface set 1 (Type 8923) for connection to the Bürkert Communicator software: includes connection cable (M12 and micro USB), stick with integrated terminating resistor, power supply and software	772426 
USB-bÜS interface set 2 (Type 8923) for connection to the Bürkert Communicator software: including bÜS stick, connection cable to M12 plug, M12 connection cable on micro USB for the bÜS service interface and Y distributor, cable length: 0.7 m	772551 